

# Wheel Chair Caddy

- CUT:** 2—15" X 19" BACK  
 2—12" x 19" MIDDLE POCKET  
 2—10" x 19" FRONT POCKET  
 2—2-1/2" X 12" FOR STRAPS

1. Sew straps and turn. Place/pin a strap 1/2" in on the right side of the back. Set aside. Figure 1.
2. Stitch Front Pocket (10" x 12") right sides together along top edge. Fig. 2
3. Place Front Pocket on Middle pocket and stitch as illustrated in Fig. 3. Stitch as shown for small pockets to hold small items such as glasses, pens, paper, etc.
4. Place pockets on right side of back piece, being careful to keep straps out of the sides. Place second back on top, right side down. Stitch around leaving about 6" open between straps for turning. Turn and topstitch around full edge for stress wear, Fig. 4

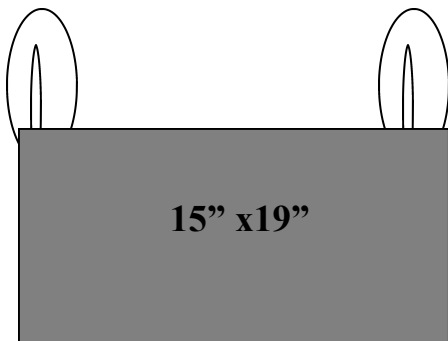


Fig. 1 Back

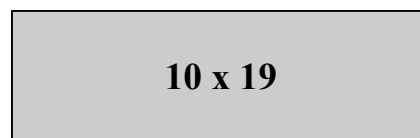


Fig. 2 Top Pocket

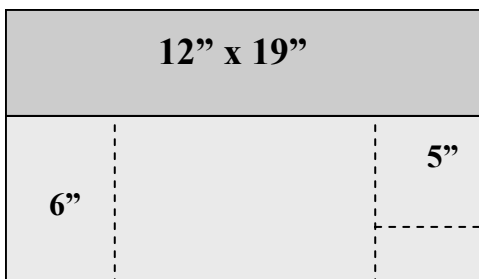


Fig.3 Pockets

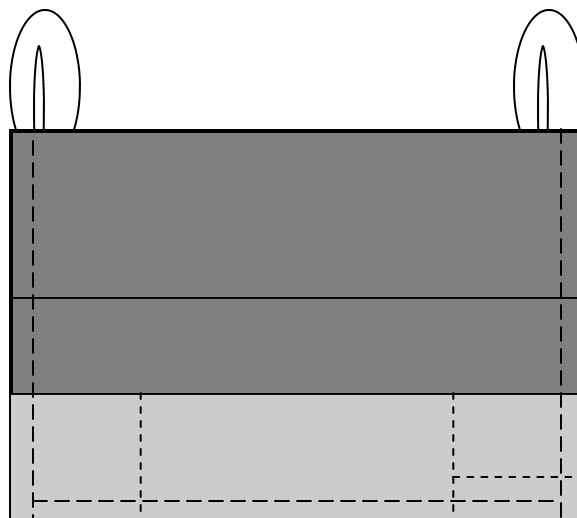


Fig. 4